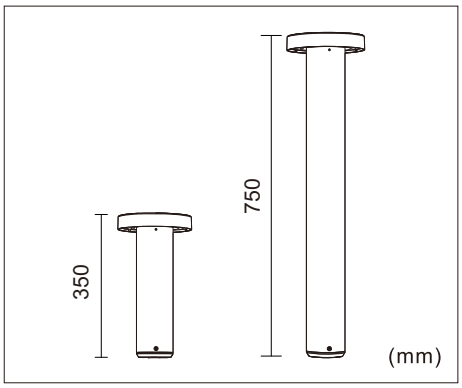

Installationsanweisung

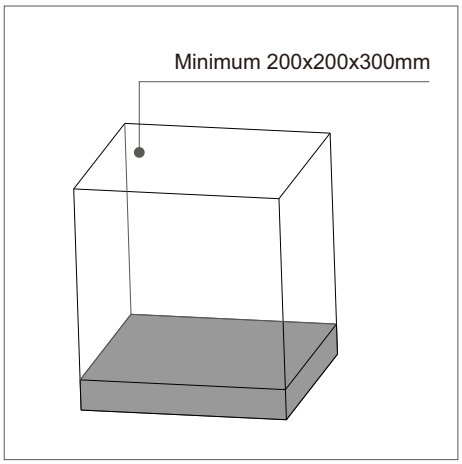

1. Dig a hole with minimum size 200x200x300mm

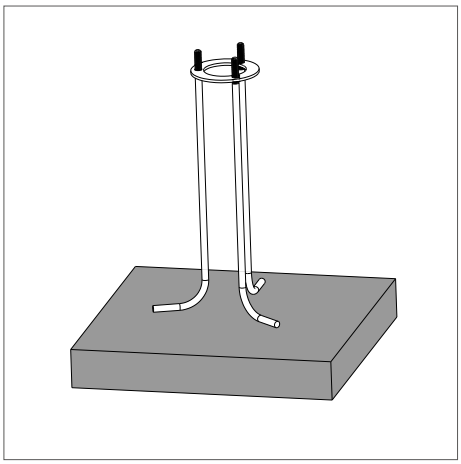

2. Put the J Anchor Bolt Kit into the hole

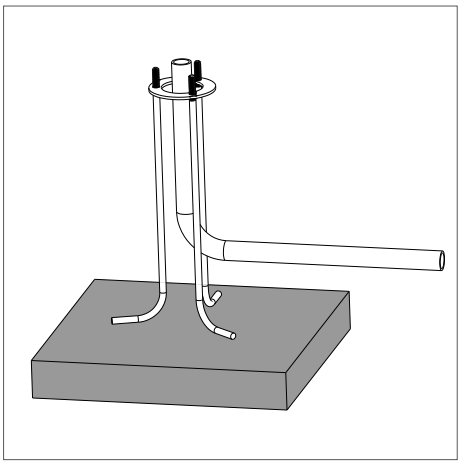

3. Install the conduit tube

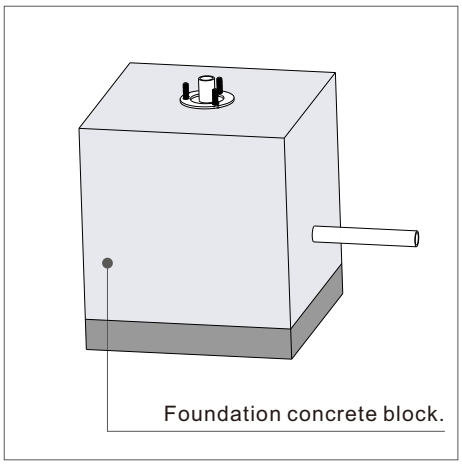

4.Make sure the bracket plate is flat with ground

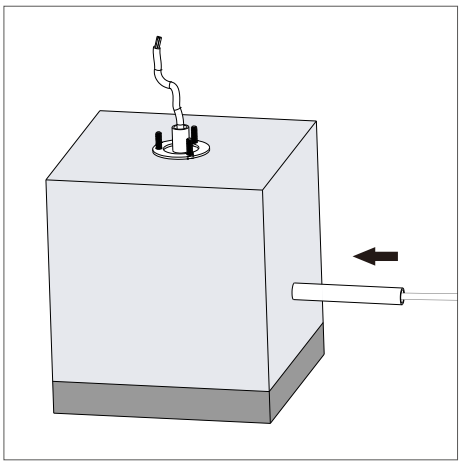

5. Put the wire through conduit tube

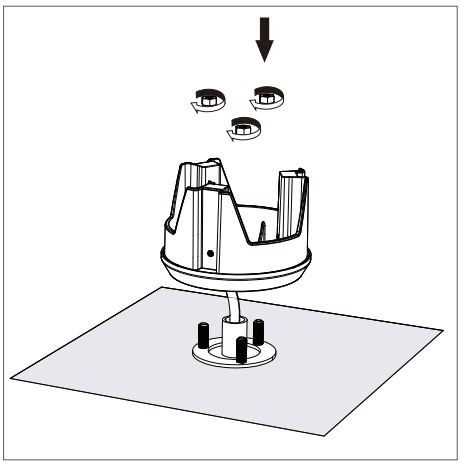

6. Fix the mounting plate to the J Anchor Bolt Kit

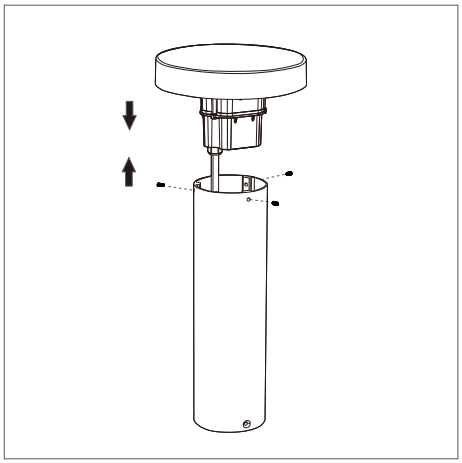

7. Fix the bollard head and bollard tube

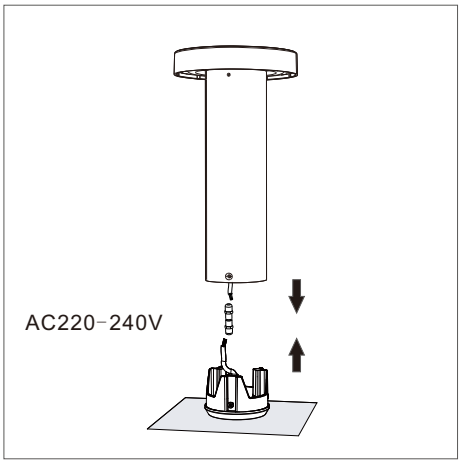

8. Connect the bollard wire to the electricity cable

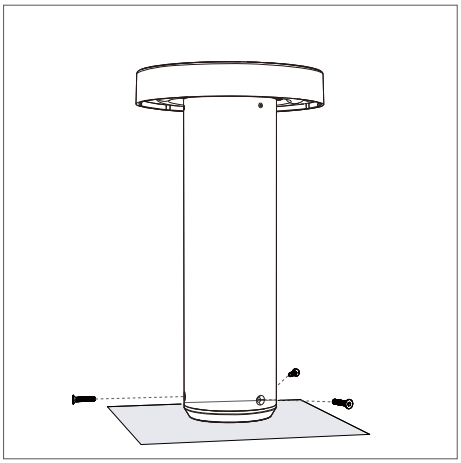

9. Fix the bollard tube onto the mounting base